




Ideal Tint

Typical Squeegee Pattern for Applying Film

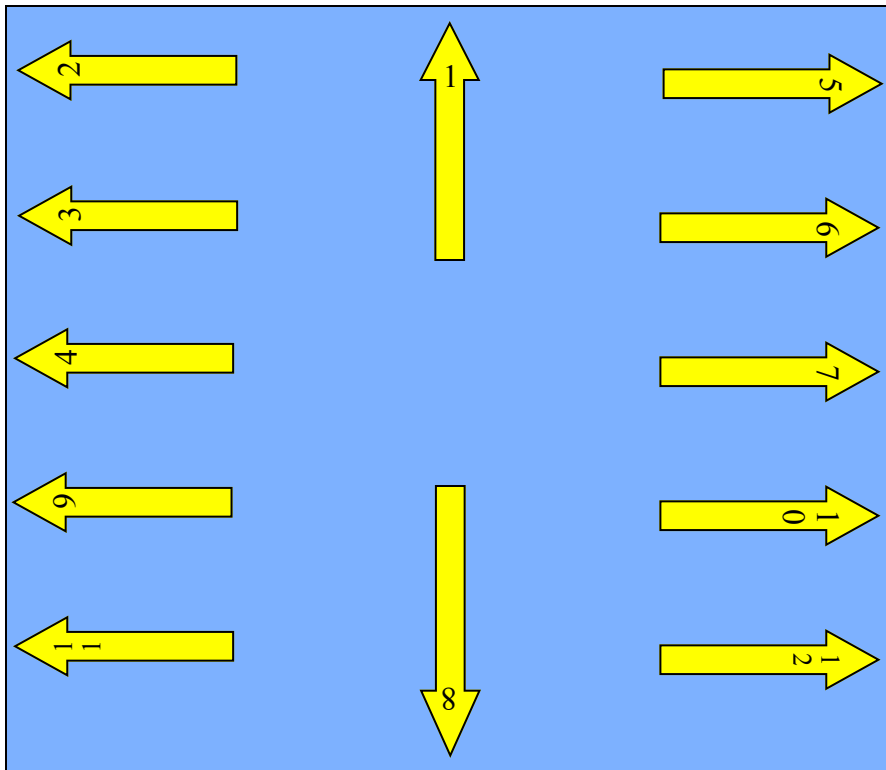

Remember to use overlapping strokes to remove water and air from between the film and glass.